

How to use the iVotronic Touch Screen Voting Machine

iVotronic Touch Screen

iVotronic prevents the voter from casting two votes in a single race ([over-voting](#)) and alerts the voter of races with no votes cast ([under-votes](#)). In addition, the iVotronic also includes a paper receipt that remains in the machine but allows voters to see their individual votes to verify the machine records them accurately.

1, 2, 3, Vote

1. **Activate Ballot**

A poll worker will activate the machine for you to vote.

2. **Select Candidate**

To select your candidate, touch the box next to the name. If you choose the wrong candidate, you can deselect that candidate by touching the box again. The iVotronic will not allow you to over-vote -- voting for more people than may be elected to any one office.

3. **Review Ballot**

After completing the last ballot page, touch "review" and carefully look over your choices. To change a vote, touch the box next to the candidate or office name and then touch the box next to your new selection. You may also review your choices on the paper receipt to the left of the screen.

4. **VOTE!**

When finished making your choices, press the flashing red "vote" button to cast your ballot. When the "Thank You for Voting" screen appears, you have properly cast your ballot.

